



GoMiniGo 'No Holes' License Plate Bracket Guide

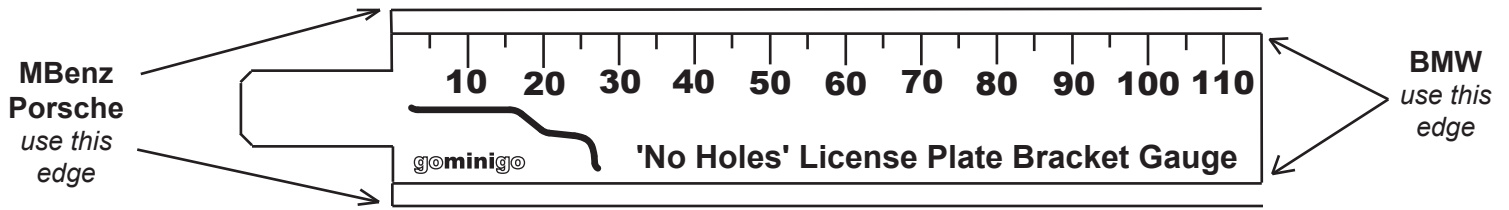

Instructions:

1. Print this page.
2. Cut out the GOMINIGO 'No Holes' License Plate Bracket Gauge. Please note the need to cut different sizes based on the make of your vehicle. MB and Porsche have much bigger towhook threads as compared to BMW.
3. On the front of your car, carefully remove the towhook cover. Sometimes these can be tight. Please use care on the painted covers as they mar easily.
4. Insert the GOMINIGO 'No Holes' License Plate Bracket Gauge into the towhook receptacle hole until the shoulder, marked by the arrow, bottoms against the receptacle.
5. Measure the distance from the towhook receptacle to your front bumper using the GOMINIGO 'No Holes' License Plate Bracket Gauge. Because most bumpers are contoured, please record the highest value which is usually towards the center of the car.

- In the example to the right, the number you should send to us is 50mm.
-

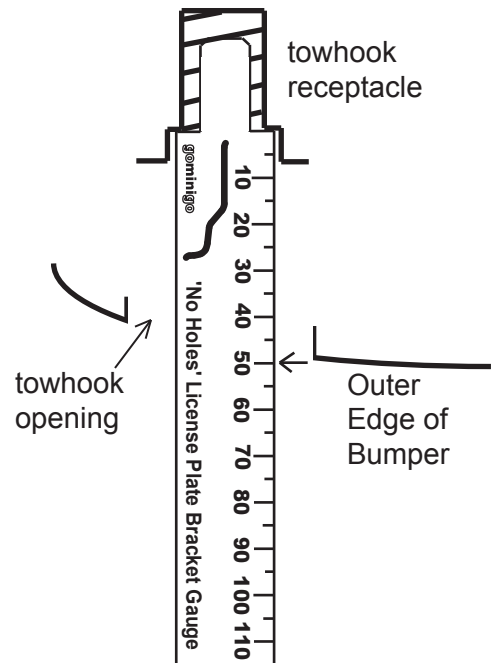

6. Email inquiries@gominigo.com the above value. We will let you know which kit is the most appropriate for your car. If we do not have a kit that is correct, we will most likely produce one quickly.

Thank you from the GoMiniGo team

gominigo